




Product Description: Chain Saw
Model Number: CS1800
Body Number: 0640004001_S
Version: A
Issue Date: 2019/06/11

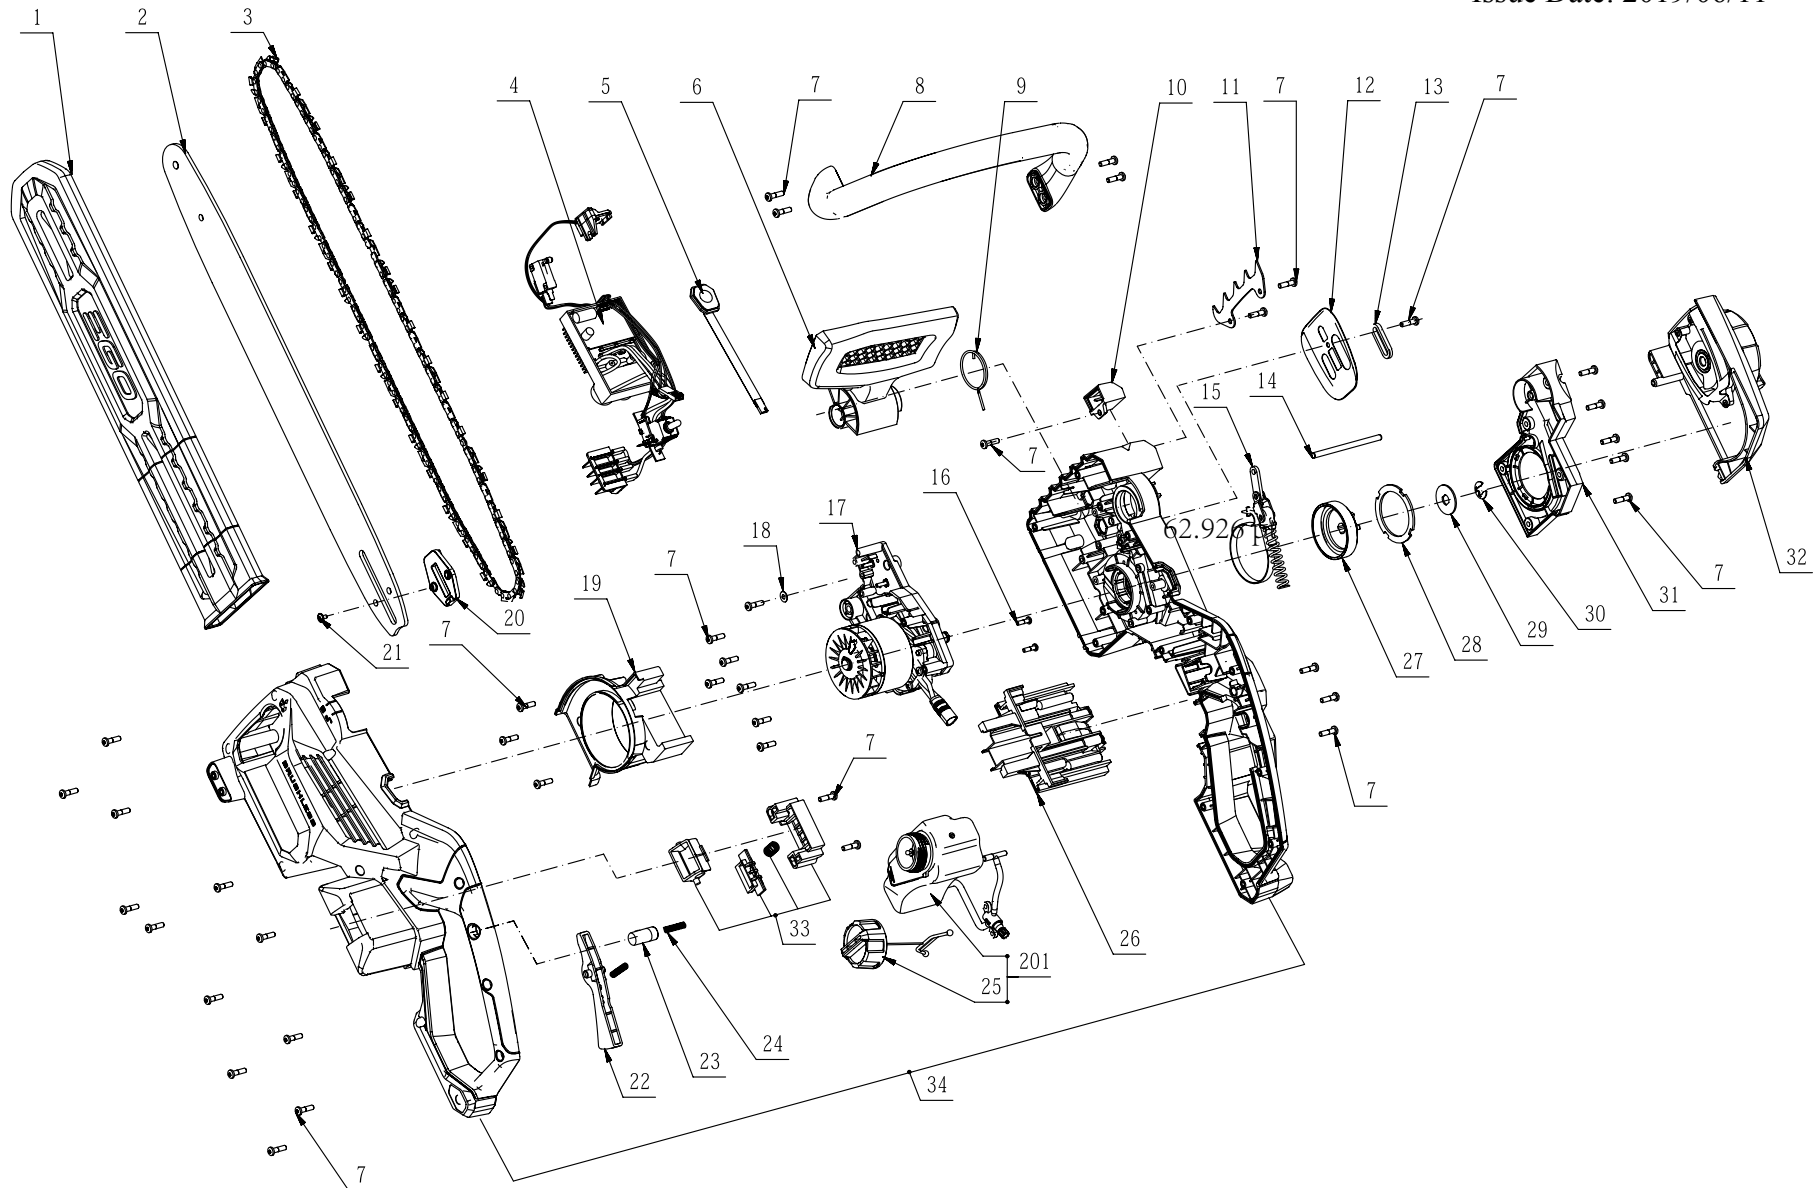

Service Part List_CS1800_Version A

No.	Product Model#	Part Number	Description	Qty
1	CS1800	3130408001	Sheath	1
2	CS1800	3706993001	Guide	1
3	CS1800	3810738001	Chain	1
4	CS1800	2830577002	Electric ASSY	1
5	CS1800	2826939001	Support Assembly	1
6	CS1800	3130304001	Board	1
7	CS1800	5620479001	Screw	40
8	CS1800	3127504002	Front Handle	1
9	CS1800	3660755001	Torsion Spring	1
10	CS1800	3130327001	Transparent Cap	1
11	CS1800	3707012001	Wood Teeth	1
12	CS1800	3706992001	Protecting Cover	1
13	CS1800	3130337001	Rubber Gasket	1
14	CS1800	5670526001	Parallel Pin	1
15	CS1800	2826922001	Brake Assembly	1
16	CS1800	5610305001	Tapping Screw	2
17	CS1800	2826938001	Support Assembly	1
18	CS1800	3700182001	Washer B	1
19	CS1800	3130231001	Fan Baffle	1
20	CS1800	3521187001	Adjusting Base	1
21	CS1800	5620731001	Cross Recessed Pan Head Screw	1
22	CS1800	3130334001	Switch Trigger	1
23	CS1800	3130335001	Lock off Button	1
24	CS1800	3660427002	Spring	2
25	CS1800	2826918001	Cover Assembly	1
26	CS1800	2826746002	Support ASSY	1
27	CS1800	3422529001	Sprocket	1
28	CS1800	5690440001	Felt Ring	1
29	CS1800	5660208002	Gasket	1
30	CS1800	5660242001	"E" Ring	1
31	CS1800	3130303001	Cover	1
32	CS1800	2826745002	Cover ASSY	1

No.	Product Model#	Part Number	Description	Qty
33	CS1800	2826940001	Button Unit	1
34	CS1800	2826824001	Housing Set	1
201	CS1800	2826782002	Pump ASSY	1