



No.	Product Model#	Part Number	Description	Qty
1	PS4561C-00	2827214001	Release Button Assembly	1.0
2	PS4561C-00	2827213001	Pop-up Assembly	2.0
3	PS4561C-00	3131034002	Switch Button	1.0
4	PS4561C-00	3660088001	Knob-reset Spring	1.0
5	PS4561C-00	3660427002	Spring	1.0
6	PS4561C-00	3131495001	Lock off Button	1.0
7	PS4561C-00	3131518001	Clamping Block	1.0
8	PS4561C-00	3131514001	Front Handle	1.0
9	PS4561C-00	3400010003	Wing Nut	1.0
10	PS4561C-00	2825135004	Handle Lever Set	1.0
11	PS4561C-00	3130337001	Rubber Gasket	1.0
12	PS4561C-00	2827784001	Driving Wheel Assembly	1.0
13	PS4561C-00	2827678002	Cover Assembly	1.0
14	PS4561C-00	5610294001	Tapping Screw	31.0
15	PS4561C-00	2827223001	Kettle Cover Assembly	1.0
16	PS4561C-00	2827740002	Kettle Assembly	1.0
17	PS4561C-00	5620377003	Hexagon Socket Screw	2.0
18	PS4561C-00	2827741002	Pump Assembly	1.0
19	PS4561C-00	3131465001	Sheath	1.0